

Model 2010D

Multi-gas Dilution Calibrator

The Model 2010D is a simple, but powerful Intelligent Multi-gas Dilution Calibrator that can easily perform gas dilution, multi-source gas blending, ozone generation, and gas phase titration (GPT = NO + O3 => NO2) for environmental, laboratory, or point source monitoring.



The Multi-gas system is designed to be either sequence based (gases are established, gases are assigned to source input ports, desired dilution flow defined, and output concentrations are established), or the unit can be manually controlled by the operator from the status window. Flexibility, without complicated menu systems or restrictions allow the operator to fully control the calibrator for various applications.

Users can easily navigate the menu system for setup or to check various parameters while the unit is idle or actively running. Flexibility allows any operator to easily start or stop an operation sequence, manually adjust flows while an operation is active, change ozone concentration, open/close source valves, manually purge the gas system while in operation, or view all active parameters from one simple status window. The status window will display the dilution of all gases present when using a multi-blend cylinder or the value of NO₂ generated during GPT. Additionally, users can switch from one sequence to another without stopping the entire system for seamless transition during testing.

The Model 2010D calibrator uses embedded microprocessor technology to precisely deliver and control gas concentrations along multiple curve fits to linearize the desired output for the intended application. The pneumatic system uses Mass Flow Controllers (MFC's) to precisely meter gas streams and implement multiple curve correction algorithms to deliver precise and repeatable concentrations.

The optional precision ozone generator allows the user to generate reliable, repeatable, and stable ozone for calibrating ozone analyzers or for creating NO₂ using gas phase titration for NO_x analyzers. The stable and consistent ozone output eliminates the need for complicated and time-consuming ozone adjustments prior to GPT operation.


Users can measure the ozone concentration from the internal ozone generator with Sabio's optional internal ozone photometer or measure external ozone sources by manually activating the photometer or setting the photometer to continuous monitor mode. Alternatively, the internal ozone photometer can be used to control the ozone output while actively measuring the concentration using the ozone servo control mode.

The Sabio Multi-gas Dilution Calibrator design exceeds US EPA calibration method requirements. Dilution components are calibrated with standards and test equipment traceable to the National Institute of Standards and Technology.

Specifications



Specifications subject to change without notice

Optical Bench	Input Dilution Gases	1 Standard (2 Optional)	
	Input Source Gases	4 Standard, 1 Purge, Optional 2 Additional	
	Output Manifold	6 Outputs Standard, Optional 2 Additional	
	Dilution Mass Flow Controller	0-10 SLM, Optional Ranges 0-20 SLM	
	Source Mass Flow Controller	0-100 SCCM, Optional Ranges 0-2000 SCCM	
	2nd Source Mass Flow Controller	0-100 SCCM, Optional Ranges 0-2000 SCCM	
	Input Pressure	15-45 PSI	
	Flow Accuracy	$\leq \pm 0.5\%$ Full Scale	
	Flow Repeatability	$\leq \pm 0.15\%$ Full Scale	
	Linearity	$\leq \pm 0.5\%$ Full Scale	
Response Time at Output	< 1 Minute		
Optional Internal Ozone Generator	Output (Standard)	0-1000ppb, Max-6 ppm Flexcal	
	Accuracy	$\pm 1\%$ of Set Point or ± 1 ppb @ 5 SLM	
Optional UV Absorption Photometer	Nominal Flow	100 SCCM, ± 1 SCCM	
	UV Lamp Temperature	50 °C, ± 0.1 °C	
	Standard Ranges	0-0.5, 1.0, 2.0 ppm	
	Linearity	< ± 1 ppb or 0.5% of full scale	
	Precision	< 1 ppb	
	Zero Drift	< 1 ppb for 24 hours	
	Flow Rate	1 Liter (nominal)	
Optional Internal Permeation Oven	Chamber Materials	Glass or Teflon	
	Chamber Size	3.09 cm inside chamber diam, 12.7 cm usable length, 123.6 cubic cm volume	
	Adjustable Temperature	5 °C Above Ambient Temperature to 65 °C	
	Temperature Accuracy	$\leq \pm 0.1$ °C	
	Calibrator Interface	Operation	Membrane Keypad, Keyboard, Serial, USB, Ethernet
		Calibration Definitions	20 User defined calibration sequences
Calibration Types		Gas Dilution, Ozone, GPT, Multi-gas, Multi-blend, Permeation	
Gas Definitions		2 Diluent Gases, 20 Sources Gases	
Auto Calibrations		20 timer driven cal routines that perform user-defined calibration sequences on a 7-day calendar of event	
Digital Inputs		8 Status I/O bits for calibrator functions, Optional 24 bits	
Digital Input Types		Contact Closure or TTL Logic	
Digital Outputs		8 Status Outputs bits for monitoring calibrator functions, Optional 24 bits	
Communications	RS232, Ethernet 10/100 Base-T, USB		
Calibrator System	Operating Temperature	5 °C to 40 °C	
	Dimensions	2010D 5.25" (13.3 cm) H x 16.2" (41.2 cm) W x 19.3" (48.9 cm)D	
	Base Unit Weight	20 lbs. (9.1 kg)	
	Input Voltage	98-264 VAC, 150-300 VA, 50/60 HZ	

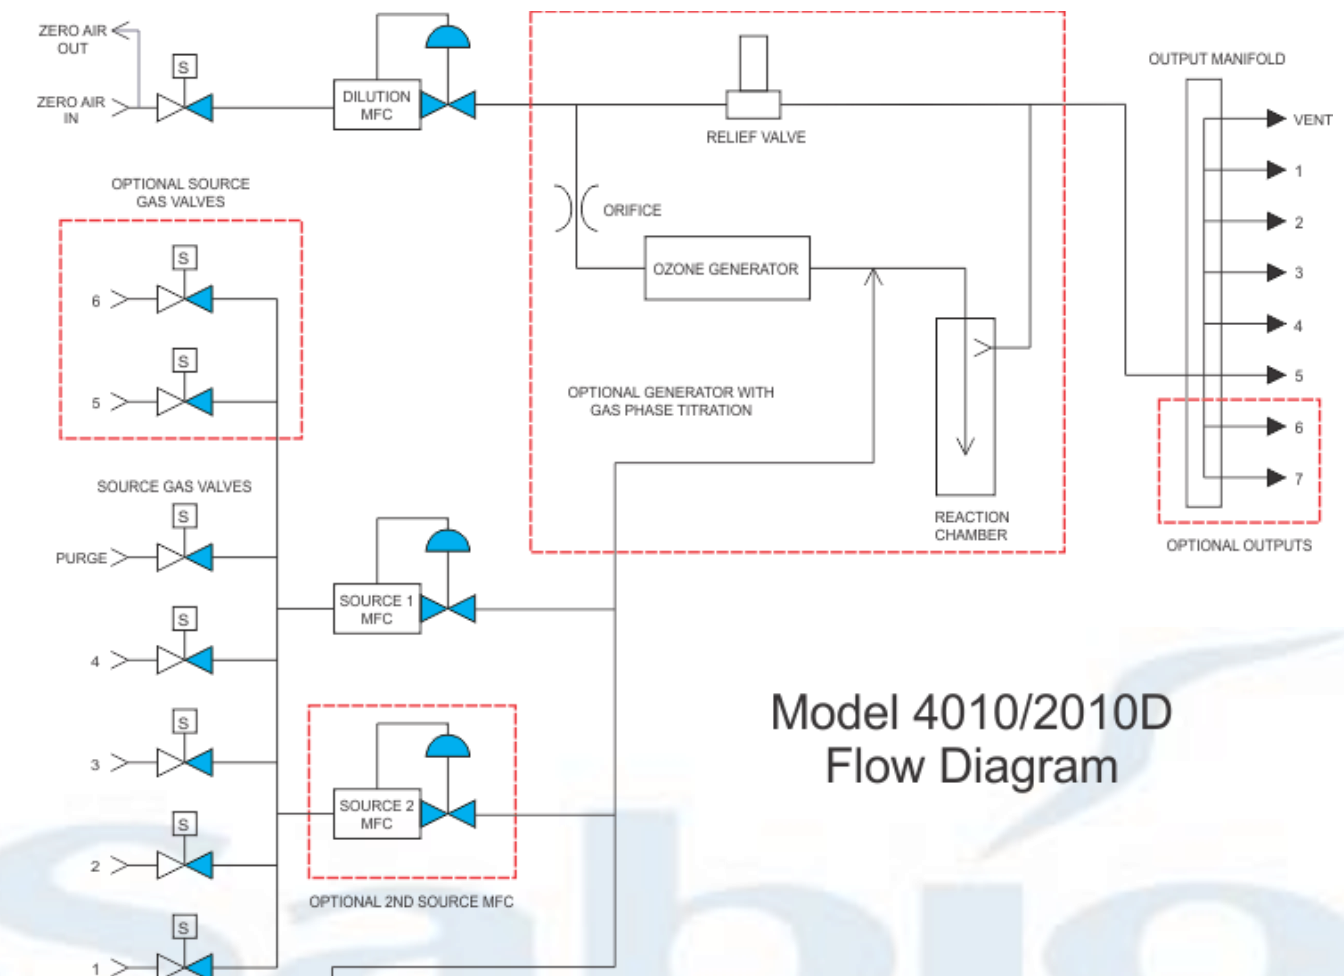

Model 4010/2010D Flow Diagram

Additional Options and Features Available

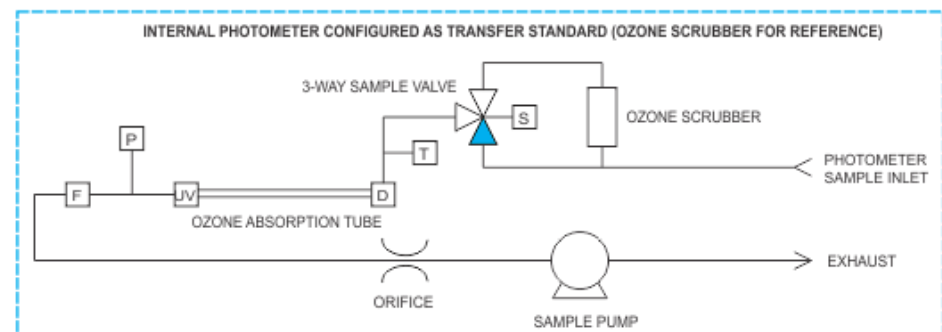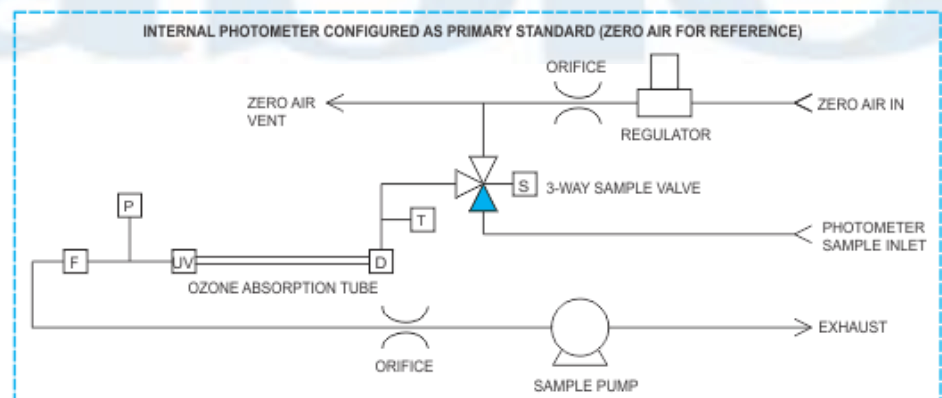

Sabio Environmental, LLC
21 Cypress Blvd Suite 1130
Round Rock, TX 78665

PH: 512.869.0544
sales@sabio.com
www.sabio.com